# **Tech Specification:**

| Model No:            | Boxkolor UHD   |  |  |
|----------------------|--|--|--|
| Voltage Input:       | 100-240V AC, 50/60Hz   |  |  |
| LED Type:            | 6in1 LEDs  |  |  |
| Beam Angle:          | 25°  |  |  |
| Optical Lens Size:   | 42mm   |  |  |
| Protocol:            | USITT DMX-512, AirDMX System   |  |  |
| DMX Channel Mode:    | 3/6/8/11 CH  |  |  |
| Control Mode:        | AirDMX, DMX-512, Standalone, Master/slave, Sound Active, iOS or Android Smartphone |  |  |
| Dimmer Mode:         | 4 Dimming Curves for different application   |  |  |
| PWM Dimming:         | 16bit PWM Dimming at 5200HZ  |  |  |
| Battery Powered:     | 14.8V x 8.8 Ah = 131Wh   |  |  |
| Wireless DMX In/Out: | 2.4G Wireless DMX Transceiver  |  |  |
| Body Material:       | Aluminum Die-casting   |  |  |
| Waterproof Grade:    | IP33 Indoor Use Only   |  |  |
| Product Size         | 138 x144 x188mm  |  |  |
| Net Weight.:         | 3kgs   |  |  |
| Certificate.:        | CE-LVD, CE-EMC, R&TTE, RoHs, UN38.3, MSDS  |  |  |



# **User's Manual Book**







### The Lithium Battery System

The "Boxkolor" features our proprietary Lithium-Ion internal battery system which allows the user to operate their light without AC power for up to 20 hours.

It is powered with Lithium Battery of 11.1V 8.8Ah=131Wh

Battery Fuse is Removed due to Air Transport Regulation, must be inserted before first charging. Fuse Holder and the Fused is attached in the same bag with this manual book

**Battery Fuse Ratings is 3A 250V** 

Turn on the **Main Power** on the base the "**Boxkolor**", you can find the approximate percentage of power remaining from the TFT Screen as below:

100% 42°C ID01 \*

# **Battery Charging**

Please plugs the power cord into a power source of 110 or 220V, and turn on the "Main Power" Switch on the base, the battery will work only when the switch is turned on.

From the TFT Screen you can see the approximate percentage of power remaining.

When after 3-4 hours charging, you can find the below picture, that mean battery is fully charged

100% 42°C ID01 \*

#### IMPORTANT:

Please ask the professional engineer to repair if there is any quality question, or send back to the

factory, please do not repair by yourself.

#### **Automatic Mode**

Automatic Mode will enable you to run the automatic programs on the products.

To turn on Automatic mode:

- 1. Press <Auto> on the IRC Remote
- 2. Press <+> or <-> to increase or decrease the speed of the program

#### **Fade Mode**

Fade Mode will enable you to run the automatic programs under Fade Mode.

To turn on Fade mode:

- Press <Fade> on the IRC Remote
- 2. Press <+> or <-> to increase or decrease the Fade speed of the program

#### **Manual Color Mixing Mode**

To manually control the RGBAW+UV Color Mixing:

1. Press <R >, <G>, <B>, <A>, <W>, or <UV> to make color mixing.

Note: To use the amber, white, or UV color options, the fixture must be capable of outstanding that corresponding color light.

Press <+> or <-> to increase or decrease the value of each color

### **Color Mode**

Color Mode will enable you to choose 10 colors built-in.

- 1. Press any number between <0 > and <9> to choose your color
- <0> is for red, <2> is for green, <3> is for blue, <4> is for amber, <5> is for white, <6> is for ultraviolet,
   <1> is for yellow, <8> is for purple, <9> is for grass green

#### Strobe Mode

Strobe Mode will enable you to adjust the strobe rate of the color you choose.

To turn on Strobe mode:

Press <Strobe> on the IRC Remote

- 2. Press <+> or <-> to increase or decrease the Strobe Rate
- 3. Choose a color by Manual Color Mixing Mode

# **Infrared Remote Control (IRC)**

Note: Make sure to point the IRC Remote directly at the receiver on the product.



### **Address Mode**

Address Mode will enable you to set up the new DMX Address.

To set up a new DMX address:

- Press <Addr> on the IRC Remote
- 2. Press <+> or <-> to increase or decrease the DMX Address Value

#### **Sound-Active Mode**

Sound-Active Mode will enable the product to respond to the music.

To turn on Sound-Active mode:

- . Press <Sound> on the IRC Remote
- 2. Press <+> or <-> to increase or decrease sound sensitivity

# The "AirDMX System"


 The "AirDMX System" includes one "AirBox", and no quantity limited "SmartDJ-S4", you can connect the "AirBox" to DMX Controller or Smartphone App of iOS or Android to have more fun with our "Boxkolor"



"AirBox"

For each "AirBox" and "SmartDJ-S4", there is 16 ID for different groups of wireless DMX, from ID00 to ID15, please set the "AirBox" and "Boxkolor" under the same "ID XX"



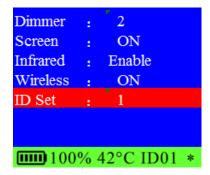

### "AirBox"

# The AirDMX App for iOS or Android

For iOS, please search and download the app from the iOS App Store For Android OS, please scan the QR code below to download the app for your smart phone










After installation of the app, turn on the power switch on the "AirBox", then connect your smart phone to the Wifi named as "AirDMX-xxx". The Wifi password is "12345678"

- 1. Open the "AirDMX" app:
- Our "AirDMX" can be used to control led uplights, led gobo projectors, led studio lights, Choose the one you Like, then enjoy it.

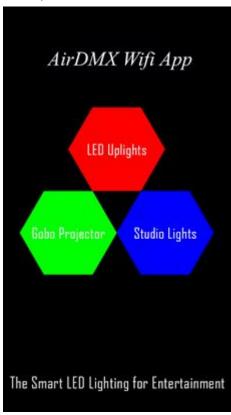

### 2. Standard Mode

|         | Ch1 | 000-255 | Master Dimmer |
|---------|-----|---------|---------------|
|         | Ch2 | 000-255 | Red           |
|         | Ch3 | 000-255 | Green         |
| 8       | Ch4 | 000-255 | Blue          |
|         | Ch5 | 000-255 | Amber         |
| Channel | Ch6 | 000-255 | White         |
|         | Ch7 | 000-255 | UV            |
|         | Ch8 | 000-255 | Strobe        |

### 2. Easy Mode

|         | Ch1 | 000-255 | Red   |
|---------|-----|---------|-------|
| _       | Ch2 | 000-255 | Green |
| б       | Ch3 | 000-255 | Blue  |
| Channal | Ch4 | 000-255 | Amber |
| Channel | Ch5 | 000-255 | White |
|         | Ch6 | 000-255 | UV    |

### 3. HSV Mode

|   | Ch1 | 000-255 | Hue        |
|---|-----|---------|------------|
| 3 | Ch2 | 000-255 | Saturation |
|   | Ch3 | 000-255 | Value      |

4

| Channel |  |  |  |  |
|---------|--|--|--|--|
|---------|--|--|--|--|


# **The Channel Modes**

# 1. Extend Mode:

|         | Ch1  | 000-255 | Master Dimmer |
|---------|------|---------|---------------|
|         | Ch2  | 000-255 | Red           |
|         | Ch3  | 000-255 | Green         |
|         | Ch4  | 000-255 | Blue          |
|         | Ch5  | 000-255 | Amber         |
|         | Ch6  | 000-255 | White         |
| 11      | Ch7  | 000-255 | UV            |
|         | Ch8  | 000-255 | Strobe        |
| Channel |      |         |               |
|         |      | 000-015 | None          |
|         | Ch9  | 016-095 | Auto Mode     |
|         | Cita | 096-175 | Fade Mode     |
|         |      | 176-255 | Sound Active  |
|         |      |         |               |
|         | Ch10 | 0-255   | Speed for Ch9 |

| Ch11 | 000-005<br>006-065<br>066-125 | Menu Default Linear Dimmer Mode Curve Dimmer Mode |  |
|------|-------------------------------|---|--|
|      | 126-185<br>186-255            | Theatre Dimmer Mode Studio Dimmer Mode            |  |



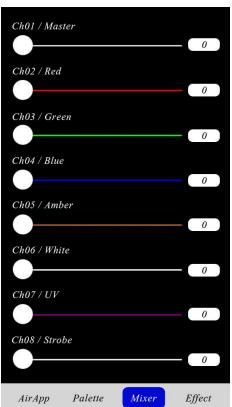

### **The Menu Panel**

### **The Control Panel**


There are 4 control buttons below the LED display which allow you to navigate through the various control panel menus.

**<ESC>** Is used to navigate to the previous higher-level menu item.

**<DOWN>** Scrolls through the menu items and numbers in descending order.

**<UP>** Scrolls through the menu items and numbers in ascending order.

**<ENTER>** Is used to select and confirm/store the current selection

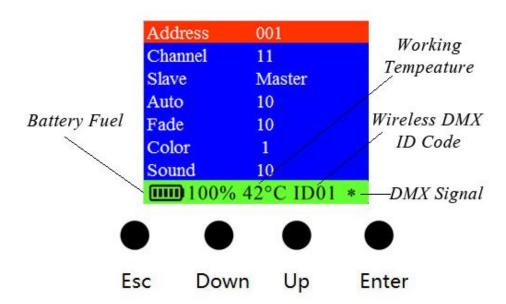

### The Menu Structure

| Address : 001-512      | Address Setting                       |  |
|------------------------|---------------------------------------|--|
| Channel: 11            | 4 Channel Modes of 3 / 6 / 8 / 11     |  |
| Slave : Master / Slave | Slave/Master                          |  |
| Auto: 10               | Auto Chase Speed from 1 to 15         |  |
| Fade : 10              | Auto Fade Speed from 1 to 15          |  |
| Color: 1               | Preset Colors from 1 to 32            |  |
| Sound: 10              | Sound Active Sensitivity from 1 to 10 |  |
| Red: 000               | Red Dimmer from 000 to 255            |  |
| Green : 000            | Green Dimmer from 000 to 255          |  |
| Blue : 000             | Blue Dimmer from 000 to 255           |  |

| Amber : 000                 | Amber Dimmer from 000 to 255            |
|-----------------------------|---|
| White: 000                  | White Dimmer from 000 to 255            |
| UV:000                      | UV Dimmer from 000 to 255               |
| Strobe : 0                  | Strobe from 0 to 15                     |
| Dimmer : 2                  | 4 Dimming Curves of 1 / 2 / 3 / 4       |
| Screen: ON / 30"s           | Screen Protection UnCode: "Esc" or      |
| 3016611 . 0147 30 5         | "down", "up","down","up","enter"        |
| Infrared : Enable / Disable | Infrared Remote Control                 |
| Wireless : ON / OFF         | Wireless DMX In/Out Switch              |
| ID Set : 0-15               | ID Setting from ID00 to ID15            |
| BATT:100% 36C ID01*         | Battery / Temperature / ID / DMX Signal |